


4 Ports PoE Ethernet Switch(one port uplink)

User Manual

4 ports PoE Ethernet Switch is a security surveillance Ethernet Switch which aims at Ethernet high definition surveillance and Ethernet project security system. The product fully combines the characteristics of security surveillance, provides fast packet forwarding ability and abundant backplane bandwidth, which ensures clear image and fluent transmission. Inserted static, surge protection circuit can improve product stability. The product supports one key CCTV mode, can achieve VLAN, QoS priority after configuration, control the Net storm, protect the information security, prevent the viral transmission and Ethernet attack, fully satisfy the Ethernet video security surveillance system and Ethernet project needs.

Application

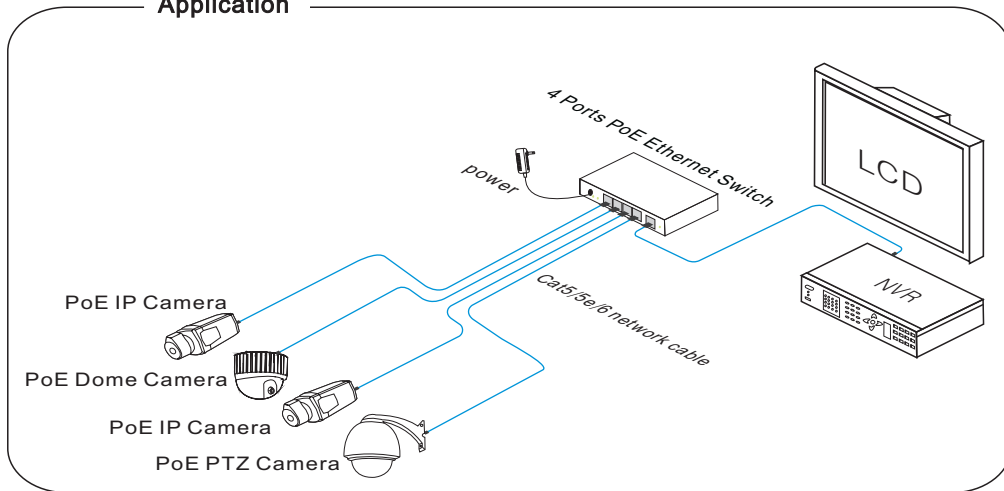

Feature


- 4×10/100Base-TX Ethernet ports (PoE ports) and 1×10/100Base-TX up-link port;
- Support IEEE802.3af/at standards, Max.30W output of single port;
- One-key CCTV mode: 1~4 downlink ports can only communicate with uplink ports, extend transmission distance up to 250m(10Mbps);
- 6KV surge protection, 8KV ESD immunity and anti-interference;
- Easy & safe installation: wall-mounting, desktop, Kensington security slot;
- Plug-and-play.

Notice


The transmission distance is related to the connected cable. We suggest standard Cat5e/6 network cable, so the transmission distance can up to 100m!

Board Diagram


Front board

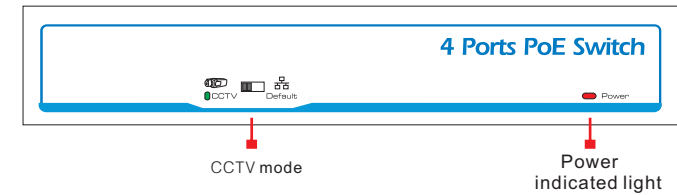

Back board

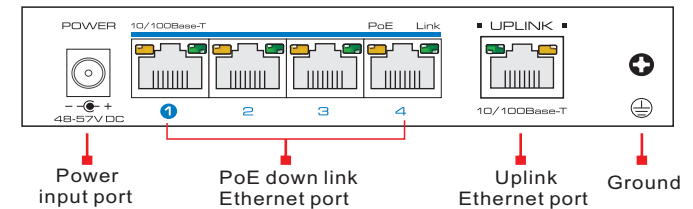

Side board

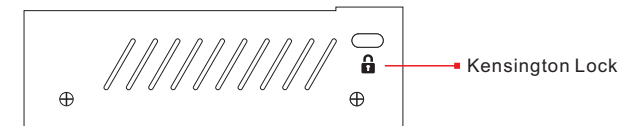

Description:

- 1) The equipment must connect the ground according to the request.
- 2) Turn the dial switch for left, the equipment can enter CCTV mode after restart the equipment power.

Installation steps

Please check the following items before installation, if it is missing, please contact the dealer .

- | | |
|-------------------------------|------|
| ● 4 ports PoE Ethernet Switch | 1pc |
| ● Power adaptor | 1pc |
| ● AC power cable | 1pc |
| ● Accessory | 1set |
| ● User manual | 1set |

Please follow the below installation steps

- 1) Please turn off the signal power and display device power before installation, installation with power will damage the transmission equipment;
- 2) Use network cable connect PoE IP camera and 1 ~ 4 down link ports of product respectively;
- 3) Use a network cable connect equipment up link port and NVR or computer;
- 4) Turn on the power of the equipment;
- 5) Check if the installation is correct, equipment is in good condition, the connection is stable, then provide power for system;
- 6) Ensure the Ethernet equipment with power and work properly.

Specification

Item	Description	
Power	Power Supply	Power Adaptor
	Voltage Range	DC48V~54V
	Consumption	< 5W
Ethernet	Speed	1-4 port:Default:10/100Mbps; CCTV:10Mbps; Uplink port:100Mbps
	Transmission Distance	1-4 port:Default:0~100m; CCTV:0~250m; UPLINK:100m
Network Switch	Ethenet Standard	IEEE 802.3/802.3u/802.3af/at
	Exchange Capacity	1.0Gbps
	Packet Forwarding Rate	0.74Mpps
	Packet Buffer	768K
	MAC Address	2K
Status Indicator	Power Light	1pc(Red)
	Ethernet Port Light	2pcs(Yellow&Green) on RJ45, yellow indicates PoE, green indicates Link/Act
	Surveillance Module Light	1pc(Green), green indicates CCTV
Protection Level	Pluse Group	Level 3 Standard: IEC61000-4-4
	ESD	Contact Discharge 6KV Air Discharge Level 8KV Standard: IEC61000-4-2
	Anti-thunder Level	6KV Standard: IEC61000-4-5
Working Environment	Working Temperature	-10°C~55°C
	Storage Temperature	-40°C~85°C
	Humidity(Non-condensing)	0~95%
Mechanical	Dimension(L*W*H)	135mm×85.6mm×27mm
	Out Shell	Galvanized Sheet
	Color	Gray
	Weight	315g

Specification change will not be noticed

Trouble Shooting

Please follow the steps if the equipment has trouble.

- Make sure the equipment is installed according to the manufactures installation guide.
- Confirm RJ45 cable order meets EIA/TIA568A or 568B standard.
- Every PoE port can provide PoE equipment maximum power less than 30W, please do not connect the PoE equipment with power over 30W.
- Replace the equipment with a proper functioning 4 ports PoE Ethernet Switch to check if the equipment is damaged.
- Please contact your vendor if trouble still exists.

Plug Producing Method

Instruments to be used: wire crimper, network tester. Wire sequence of RJ45 plug should conform with EIA/TIA568A or 568B.

- 1) Please remove 2cm long the insulating layer, and bare 4 pairs UTP cable;
- 2) Separate the 4 pairs UTP cable and straighten them;
- 3) Line up the 8 pieces of cables per EIA/TIA 568A or 568B;
- 4) Cut off the cables to leave 1.5cm bare wire;
- 5) Plug 8 cables into RJ45 plug, make sure each cable is in each pin;
- 6) Use the wire crimper to crimp it;
- 7) Repeat above 5 steps to make the another end;
- 8) Use network tester to test the cable if it works.

Pin	Color
1	White/Green
2	Green
3	White/Orange
4	Blue
5	White/Blue
6	Orange
7	White/Brown
8	Brown



EIA/TIA 568A

Pin	Color
1	White/Orange
2	Orange
3	White/Green
4	Blue
5	White/Blue
6	Green
7	White/Brown
8	Brown



EIA/TIA 568B



Notice

When choose RJ45 make sure if one end is EIA/TIA568A,the other end should also be EIA/TIA568A.
When choose RJ45 make sure if one end is EIA/TIA568B,the other end should also be EIA/TIA568B.